



*Heat up the pulley before unscrewing the set screw